



PHOTOFLEX®

LiteRoom® Instruction • Item#: 871048 (ST-MD)



Figure 1.



Figure 2.



Figure 3.



Figure 4.



Figure 5.

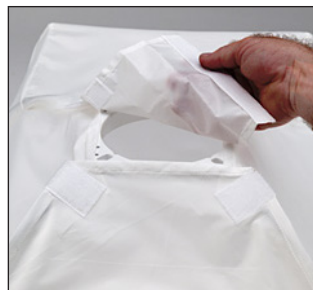


Figure 6.



Figure 7.



Figure 8.



Figure 9.

LiteRoom

Before assembling your LiteRoom, make sure all components are present. You will need:

- LiteRoom fabric tent with connector
- Four rods

Assemble the LiteRoom Softbox to the Connector

1. Place the LiteRoom with all four rods into their sleeves on a flat, clean surface.
2. If closed, open all four Quick Release Corners (QRC®). Pull Velcro® tab open at each corner so that rods extend freely.
3. Position connector at the center of the softbox. Insert the first rod into one of the rod receptacle holes.
4. Insert the second rod into the hole diagonally opposite the first hole. Insert the third and fourth rods in the same fashion.
5. Use one hand to pull QRC flap over rod tip while pushing the rod into place with your thumb. Secure flap to its Velcro counterpart. Repeat this process for the remaining corners.

NOTE: For proper dome shape to be achieved all rods must be pushed in completely.

Shooting Ports

6. The top of the LiteRoom has a cover flap which can be opened to expose an overhead shooting port. When not in use, simply secure the Velcro to its counterpart.
7. The front of the LiteRoom can be zipped completely open to provide complete access to the interior.
8. The vertical zipper in the center of the front of the LiteRoom has a double zipper design so that an opening can be created around the camera lens at any position.
9. For optimal super soft product lighting use one or two external lights with softboxes.

Customer Support (831) 786-1370

E-mail: sales@photoflex.com

Photoflex is a division of PromarkBRANDS, Bartlett, IL USA.

©2016 ALL RIGHTS RESERVED. LiteRoom®, QRC®, Photoflex® and the Photoflex logo are trademarks or registered trademarks of Photoflex and/or its affiliates in the U.S. and other countries.

PHOTOFLEX® WARRANTY

- Warranties only cover manufacturer's defects and workmanship.
- We reserve the right to inspect all merchandise returned (end users and dealers) for warranty fulfillment.
- All returns must be pre-approved with Return Manufacturers Authorization obtained from Photoflex/PromarkBRANDS.
- A receipt showing date of purchase will be required for all returns.
- Freight must be paid by the customer or dealer.
- Warranties are valid only from date of Original Purchase.