



PHOTOFLEX®

Instructions: Umbrella Back Covers and Diffusers



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7



Figure 8

Attaching the cover or diffuser to an umbrella:

1. Partially open the umbrella pointing it down toward the floor. See Figure 1
2. Place cover over the umbrella with the center opening lined up with the umbrella shaft. See Figure 2
3. Check that the outer elastic is wrapped around outside of umbrella and finish opening the umbrella until the shaft clicks in place. See Figure 3
4. The Seven foot umbrella requires opening a little larger at first so you can reach the shaft, but the same method works well to attach the cover. See Figure 4
5. Once fully opened and cover is secure, insert the umbrella shaft into the pass hole of the lamp head you are using. See Figure 5
6. Tighten the drawstring of the center cover opening around your lamp head. See Figure 6
7. Image shows diffuser cover on 72 inch umbrella. See Figure 7
8. Image shows black panel cover on 72 inch umbrella. See Figure 8

Product Numbers and SKU's:

UM-72PANEL 871097

Black Panel Cover for 72 inch Photoflex White Satin Shoot Through Umbrella.

Converts translucent umbrella to a softbox with wide light spread. Drawstring closure secures to a variety of strobe heads. Silver interior lining for added light output.

UM45DIFFUSER 871094

UM72DIFFUSER 871095

Front Diffusion Cover for 45 and 72 inch Photoflex Reflective Umbrellas.

Converts the Photoflex reflective umbrella into a softbox. Drawstring closure secures to a variety of strobe heads.

PHOTOFLEX® WARRANTY

- Warranties only cover manufacturer's defects and workmanship.
- We reserve the right to inspect all merchandise returned (end users and dealers) for warranty fulfillment.
- All returns must be pre-approved with Return Manufacturers Authorization obtained from Photoflex/PromarkBRANDS.
- A receipt showing date of purchase will be required for all returns.
- Freight must be paid by the customer or dealer.
- Warranties are valid only from date of Original Purchase.

Customer Support (800) 486-2674

e-mail: sales@photoflex.com

Photoflex is a division of PromarkBRANDS, Bartlett, IL USA.

©2016 ALL RIGHTS RESERVED. Photoflex and the Photoflex logo are trademarks or registered trademarks of Photoflex and/or its affiliates in the U.S. and other countries.