



Photoflex Crescent WARRANTY

Photoflex warrants to the first commercial owner of the Crescent to be free from defects in the material and workmanship for a period of five (5) years from the date of purchase and will repair or replace product found to be defective under normal use. Warranty does not cover damage caused by shipment, by product abuse, accident, modification, disassembly or use beyond intended use specified by Photoflex. The Crescent used in nonstandard usage will render this warranty immediately void.

This warranty is the only warranty made to any person by Photoflex and is in lieu of all other expressed or implied warranties. The remedies set forth in this warranty shall be the exclusive remedies available to any person for breach of this warranty. Under no circumstances shall Photoflex be liable to any person for incidental or consequential damages, whether arising out of breach of warranty or other contract, negligence, strict liability or other tort or otherwise.

Photoflex • Smith-Victor • Photogenic • Dot Line
Quantum • Radiopopper • Mola • Cool-Lux
Speedotron • Lumedyne • Norman • Logan

Photoflex is a division of PromarkBRANDS

1268 Humbracht Circle, Bartlett, IL 60103 U.S.A.

800-486-2674

sales@Photoflex.com | www.Photoflex.com

www.promarkbrands.com



User Manual

Model: Crescent

Item: 870207

67" Curved Multi-Surface Reflector Panel

Ideal for beauty, fashion and portrait photography, the Crescent delivers attractive reflected light without any interruptions from seams or openings. The curved surface also creates glamorous catchlights in your subject's eyes. The three interchangeable fabrics provide a variety of options to achieve the tone and look desired while the support assembly allows convenient position adjustment to any angle to get the desired results.



Features:

- Ideal for beauty, fashion and portrait photography
- Creates beautiful, glamorous reflected light
- Unique shape creates flattering catchlights in subjects eyes
- Three included reflector fabrics provide a variety of different surfaces for greater creative options
- Durable frame can be disassembled and stowed in its own compact bag for easy transport

How to assemble:



1. Insert a Support Frame Tube (E) to each end of the Middle Support Frame Tubes (D). Be sure to note that they are locked into position.



2. Slide each assembled Support Frame Tube through each of the long pockets of the fabric of choice.



3. Slide one of the Tension Rod (C) through one of the end pockets of the fabric. One at a time, insert each end of the threaded ends through the holes located at each end of the Frame Tubes. Then affix and tighten each of the two nuts to the threads on each end of the rod.

4. Repeat the step above for the opposite end of the Support Frame Tubes.



5. Next, Slide the Support Frame Tubes onto the Support Assembly's (B) Bolts; affix and tighten the nuts.



6. Simply mount the assembled reflector onto any light stand with a 5/8" spigot and adjust for the desired effect.

What's in the Box:



- A. Durable Carry Case
- B. (1) Support Assembly with Spring Loaded Tilt-Adapter with locking nuts
- C. (2) Tension Rods with locking knobs
- D. (2) Support Frame Tubes (middle segments)
- E. (4) Support Frame Tubes (end segments)
- F. Silver, White and Gold Reflector Fabrics